



 
Wifi Doorbell

USER'S MANUAL




*Please read this manual carefully and keep it in a safe place for future reference

Introduction

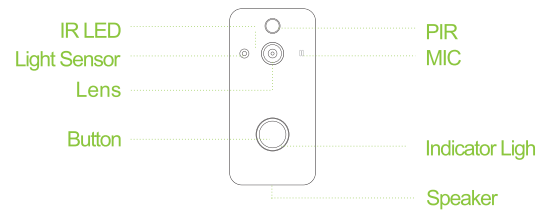


- Infrared light** In low light, it will enable infrared light to increase the environment brightness
- Light Sensor** Enable the infrared light when illumination is below 2lux
- Microphone** Capture voice and Intercom
- Push Button** Wake up the device and inform you when someone is visiting
- PIR** Detect movement and send alarm to smart phone
- Lens** Captures video images
- Indicator Light** Red Light flash slowly: Waiting for Wi-Fi Configuration
Blue light flash slowly: Working State
Red blue light flash off and on: Wi-Fi Connecting Failed
- Speaker** Emit system sound and Intercom

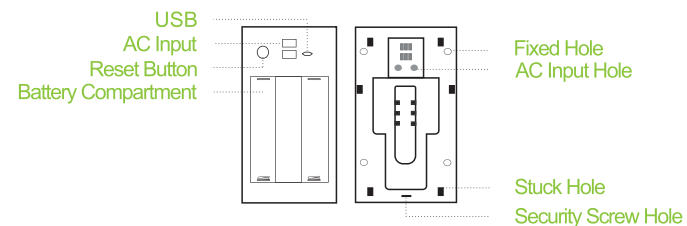 


- USB** Use this port to recharge batteries.
- AcInput** Power is supplied to the equipment by installing the AC input supply hole on the mounting bracket (for retrofit applications only).
- ResetButton** Press for 5 seconds to restore factory settings.
- Battery Compartment** Mounting 18650 specification battery.
- Fixed Hole** Fit the support on the wall with the mounting screws from the mounting kit.
- ACInput Hole** The power supply of the equipment can be supplied by connecting the hole and the AC power supply on the wall.
- Stuck Hole** Mounting the equipment onto the bracket.
- Security Screw Hole** Mounting the security screw on the fittings to prevent the equipment from being removed.

 Installation Guide

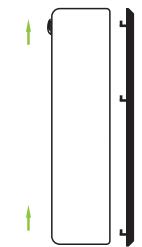


As shown, remove the back panel

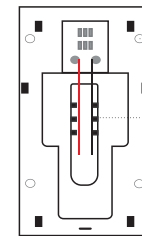 

Drill holes (4mm drill bit), insert plugs and fix the back panel on the wall with screws.

 Fixed the AC (12-24v) power line with screws (if retrofitting only)

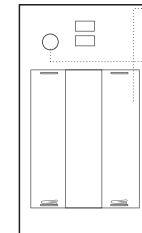

Remove the battery cover and install two 18650 batteries

Reset Button, long press for 5 seconds to reset the product

Replace the battery cover and back panel. Install screw into security screw hole to complete the installation.

Chime Pairing

- Code:** ① Press Volume key for 5 seconds until you hear a "Ding" sound and the receiver LED light flashing at the same time.
② Press the Doorbell push button three times within 8 seconds and code successfully.

 
Reset: Long press the chime forwarder key for 5 seconds until you hear "Ding" sound and the receiver light LED Light flashes at the same time.

Q&A

- Q: Device cannot connect Wi-Fi
- A: 1. Make sure the connect Wi-Fi is 2.4Gzh
2. Make sure the indicator red light flash slowly
3. Check the password whether it is correct or have space
- Q: Device cannot receive any notifications
- A: Please check again whether your phone notification permissions are enabled
- Q: Device Power Mode
- A: 1. Use the 18650 standalone
2. Use AC (12-24V) to charge the battery
3. USB Port to charge the battery

Connect Device


- ① Download APP “ToSee” from Google Play or iOS APP Store
(Please turn on all the phone notifications permissions for better user experience)
- ② Open the APP and Tap“+”button on the right corner and click “Add Device”

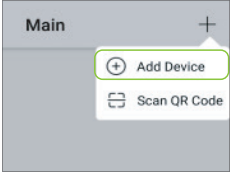

- ③ Click the button below to enter the Wi-Fi Settings interface and choose the Wi-Fi with ToSee_ prefix and back to APP



 
- ④ Input you Wi-Fi Password and start Wi-Fi Configuration

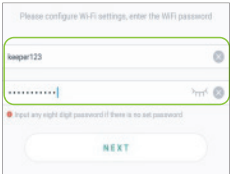

- ⑤ Set the administrator password



 - ⑥ Please rename the device after Wi-Fi connect successfully

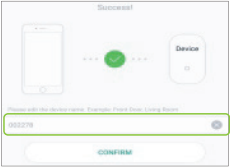

- i If you want to reconfigure your Wi-Fi network, please press reset button for 5 seconds and follow the instructions again

Function Introduction

- Two 3400mAh original battery (18650 type) can be used for 6-8 months
- High Definition resolution with 1.7MM wide-angle lens
- Support mobile phone wake up device
- Support 2.4G wireless
- Clarity Intercom
- Support PIR motion detection. When someone pass the doorbell, it will send instant APP notifications to APP
- Day and night mode automatic switch to provide high definition view to protect you and your family

Technical Parameter

Resolution	1280*720
View Angle	166°
Infrared Light	6 pieces 850mm led lights
Wi-Fi	Support 802.11 b/g/n
Audio	Clarity Intercom
Recording	TF Card(Every 15 Seconds)
SD Card	Max. up to 32G
Battery	2*18650 Battery
Notifications	Instant Notifications within 2S
Wake Up Time	Within 600MS
Wake Up Way	Push Button PIR Mobile Phone Active
Consumption	Standby current 200μA Working current 170mA

- i Two 18650 Batteries (6800mAh),working 10 minutes every day can be used for 6-8 months