



**How to program 'TV Control' keys:**

1. Press and hold 'TV' button for 5 seconds, the LED goes from blinking to solid. And STB RCU enters learning mode.
2. Press the key to be programmed on this RCU. LED begins blinking slowly. Key is ready to accept programming.
3. Aim the TV RCU towards the front of this RCU (distance less than 3cm). Press the buttons on the TV RCU. If the STB RCU is programmed correctly, the LED will flash 3 times.
4. Repeat steps 2-3 for other keys.
5. Exit Learning Mode by pressing any other buttons on the RCU LED turns off.

